



SILT FENCE

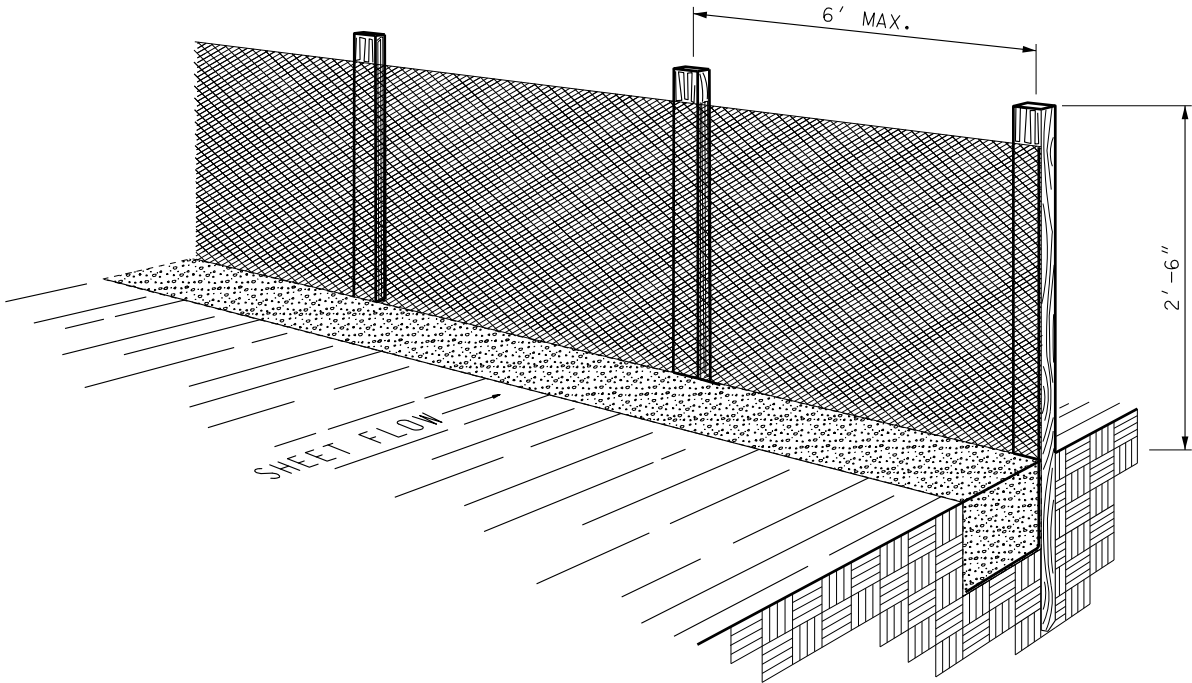


PERSPECTIVE VIEW

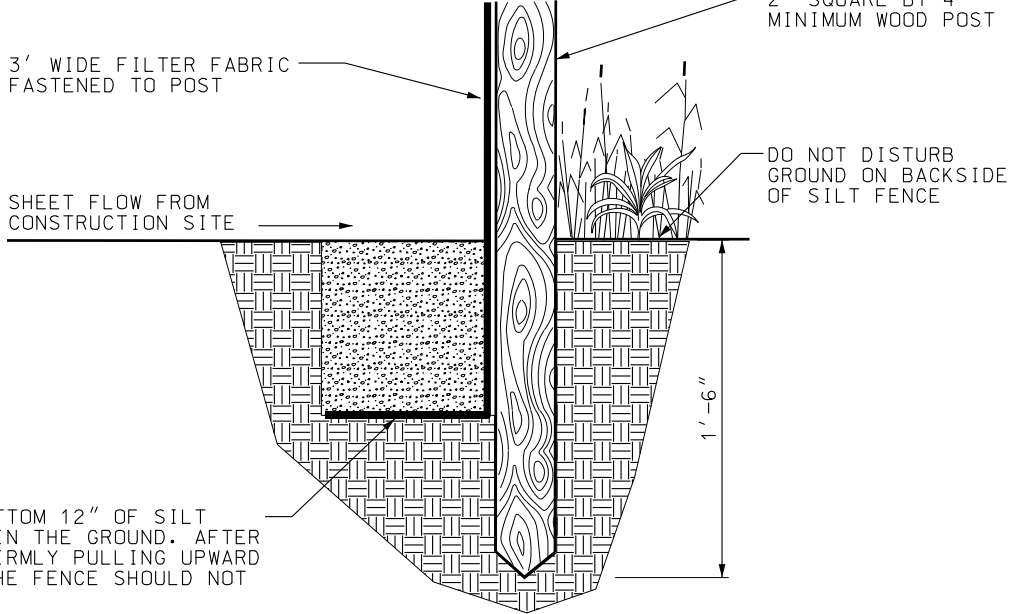


SECTION


ENTRENCH THE BOTTOM 12" OF SILT FENCE SECURELY IN THE GROUND. AFTER INSTALLATION, FIRMLY PULLING UPWARD ON THE TOP OF THE FENCE SHOULD NOT DISLODGE IT.

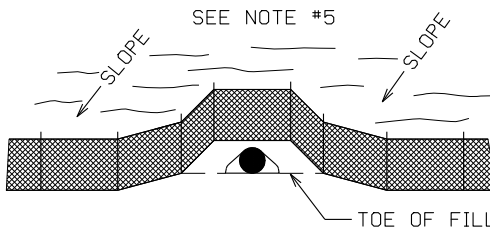


AROUND A PIPE OUTLET

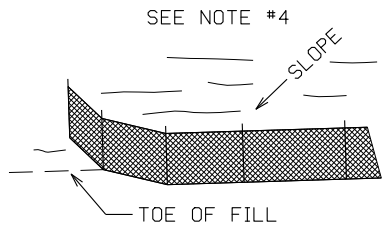

AT END OF SILT FENCE

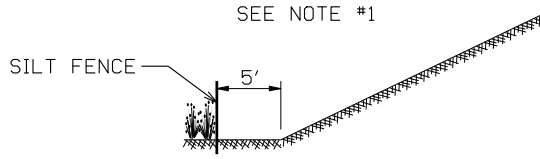

AT TOE OF FILL SLOPE

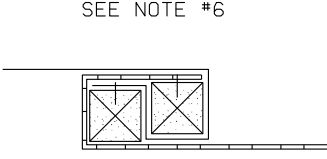

SPLICES (TOP VIEW)

SILT FENCE INSTALLATIONS

- NOTES FOR SILT FENCE:
1. WHERE PERMITTED, POSITION THE SILT FENCE 5' BEYOND THE TOE OF SLOPE.
 2. TO AVOID CREATING LOW POINTS ALONG THE SILT FENCE, ALIGN THE FENCE ALONG THE CONTOUR AS MUCH AS POSSIBLE. WHERE EXCESSIVE RUNOFF WILL ACCUMULATE AT A LOW POINT, PROVIDE AN OPENING IN THE FENCE AND INSTALL A SEDIMENT TRAP.
 3. WHEN EXCAVATING THE TRENCH, USE MACHINERY THAT WILL MINIMIZE DISTURBANCE.
 4. TO PREVENT RUNOFF FROM FLOWING AROUND THE ENDS OF THE SILT FENCE, RUN THE ENDS OF THE FENCE UP SLOPE.
 5. DO NOT PLACE SILT FENCE ACROSS POTENTIAL CONCENTRATED FLOWS (e.g., PIPE OUTLETS, DRAINAGE CHANNELS, CUT DITCHES).
 6. AVOID USING SPLICES ALONG THE FENCE AS MUCH AS POSSIBLE. IF A SPLICE IS NECESSARY, BEFORE POUNDING IN THE END POSTS, OVERLAP THE END POSTS AND TWIST 180 DEGREES.
 7. MAINTAIN A PROPERLY FUNCTIONING SILT FENCE THROUGHOUT THE DURATION OF THE PROJECT OR UNTIL DISTURBED AREAS HAVE BEEN VEGETATED.
 8. WHEN A STORM EVENT DEPOSITS SEDIMENT BEHIND THE FENCE, REMOVE THE SEDIMENT AND PLACE IT IN A STABLE AREA APPROVED BY THE ENGINEER.
 9. IN AREAS THAT HAVE BEEN SEEDED AND MULCHED, REMOVE SILT FENCE UNLESS THEY ARE PROTECTING A WETLAND OR WATER BODY.

UTAH DEPARTMENT OF TRANSPORTATION
STANDARD DRAWINGS FOR ROAD AND BRIDGE CONSTRUCTION

RECOMMENDED FOR APPROVAL
CHAIRMAN STANDARDS COMMITTEE
APPROVED
DEPUTY DIRECTOR
DATE
JAN.01.2008
DATE
JAN.01.2008

TEMPORARY
EROSION CONTROL
(SILT FENCE)

STD DWG
EN 2